







Thule XT Kit 3058

> Instructions

MERCEDES Viano, 5-dr MPV, 04-14
MERCEDES Vito, 4-dr VAN, 04-14, 15-
MERCEDES V-Class, 5-dr MPV, 15-

This kit is only for vehicles with fixpoint mounting.







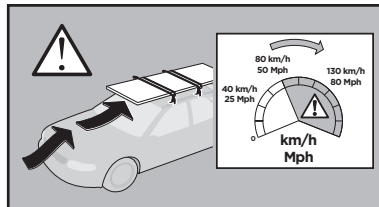
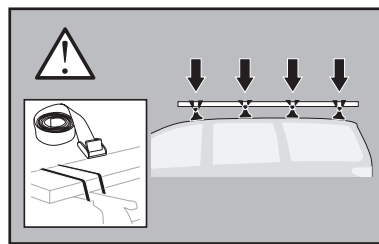
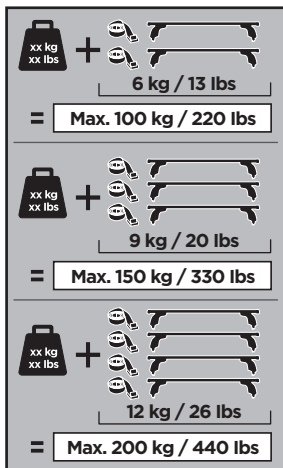
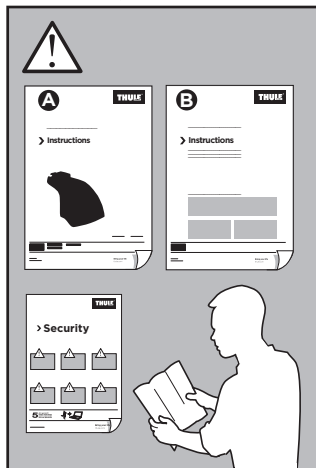


ISO 11154-E

183058

C.20150107
509-3058-03


Bring your life
thule.com

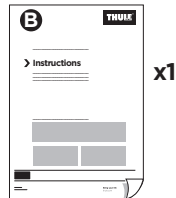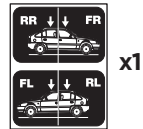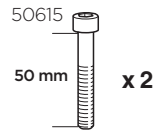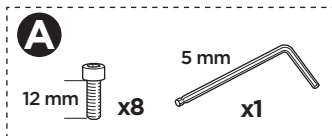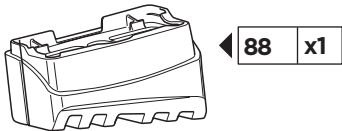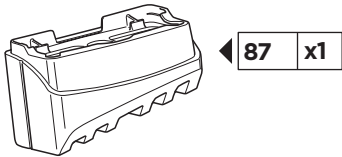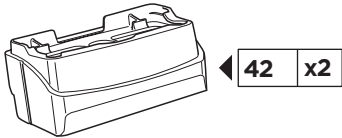






1




751
FootPack

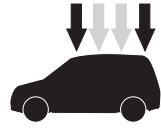





753
FootPack

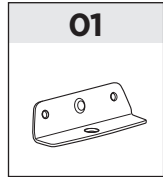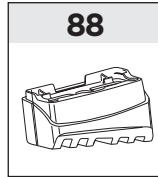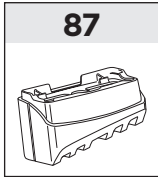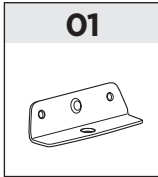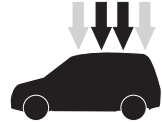

Kit 3029




Kit 3029

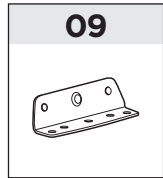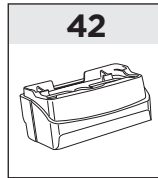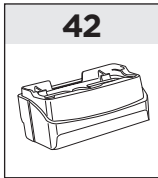
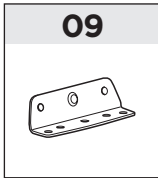


2


A

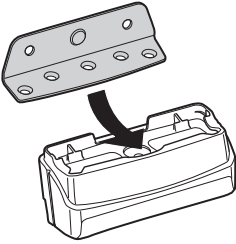


B

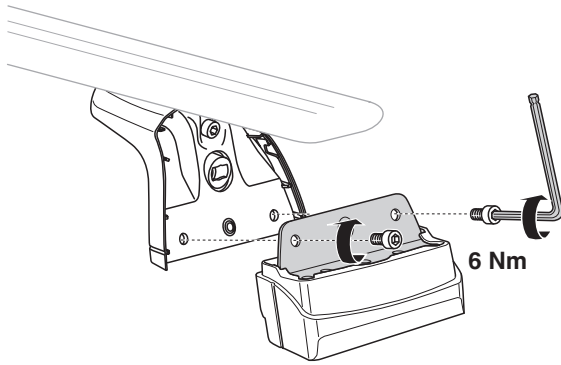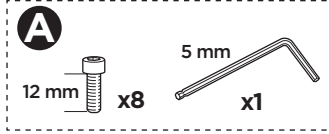



3




x1

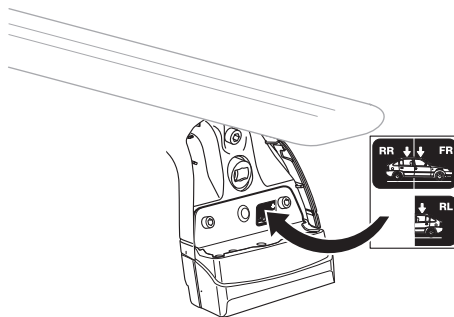


4

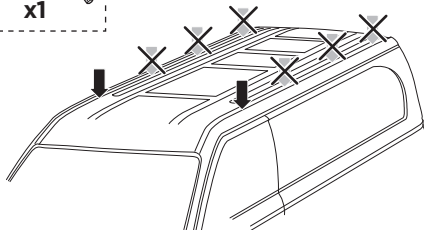


A

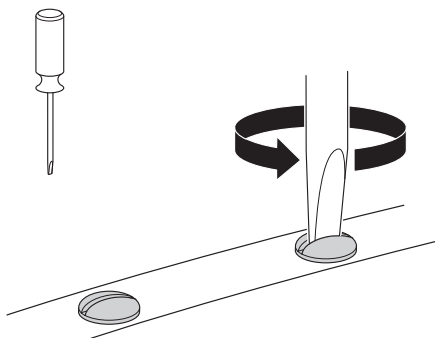


B

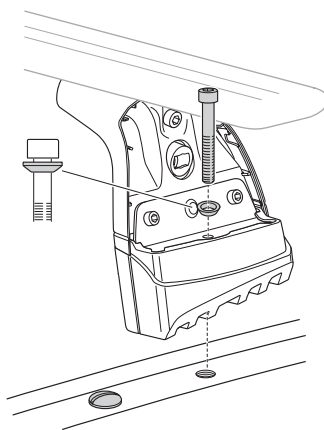



C

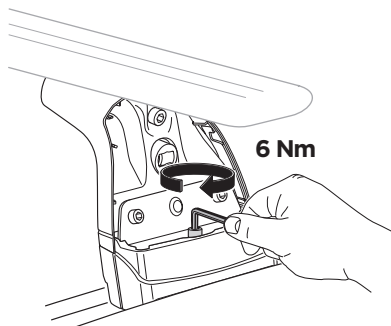


D

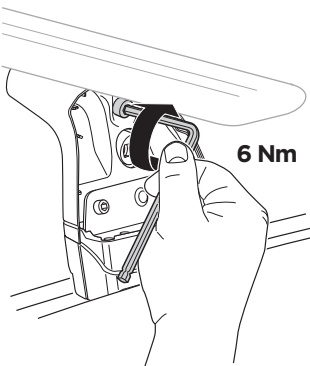


4

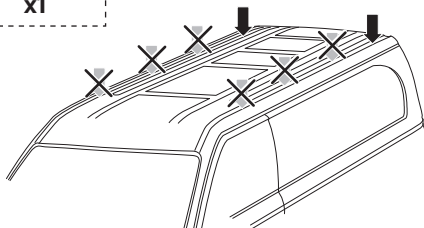


A

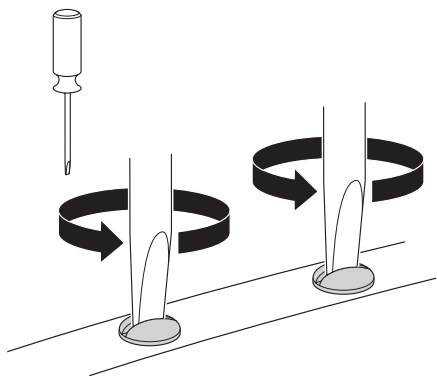

B

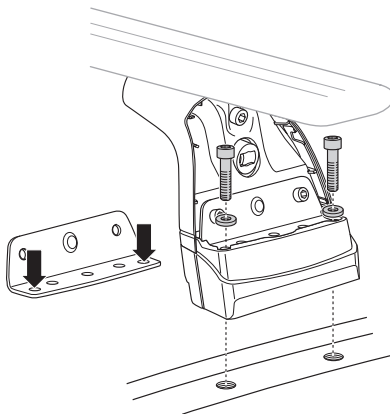

C

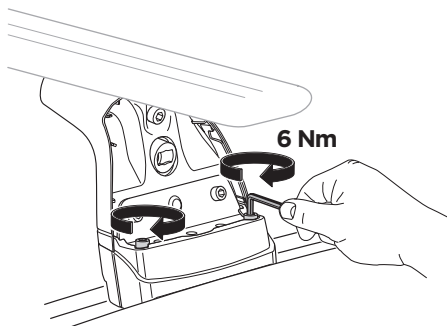

D

