
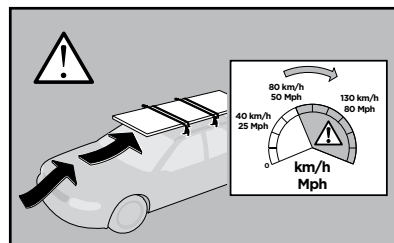
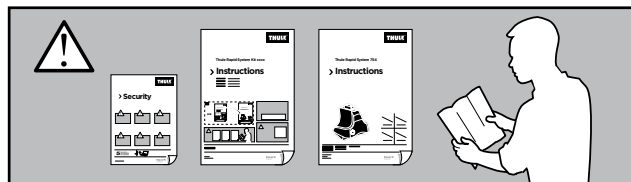
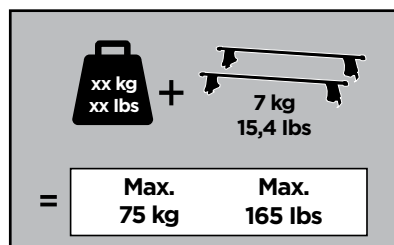


## Thule Rapid System Kit 1206

# > Instructions

**BMW X5, 5-dr Estate, 00-07\***

**\*Without roof rails**

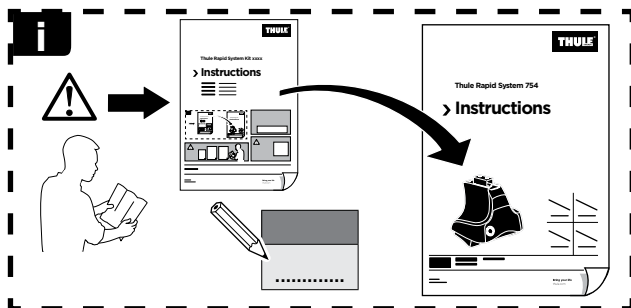

ISO 11154-E

**141206**


C.20121018  
519-1206-01

**Bring your life**  
thule.com



22

x4




222

x4






x1



x1

1



|                            | X (scale) | X (mm) | X (inch)                       |
|----------------------------|-----------|--------|--------------------------------|
| BMW X5, 5-dr Estate, 00-07 | 39,5      | 1046   | 41 <sup>1</sup> / <sub>8</sub> |

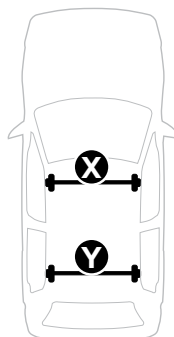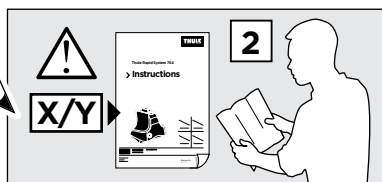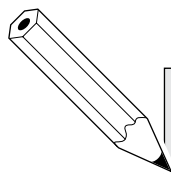

|                            | Y (scale) | Y (mm) | Y (inch)                       |
|----------------------------|-----------|--------|--------------------------------|
| BMW X5, 5-dr Estate, 00-07 | 38        | 1031   | 40 <sup>5</sup> / <sub>8</sub> |

**2**

**BMW X5, 5-dr Estate, 00-07**

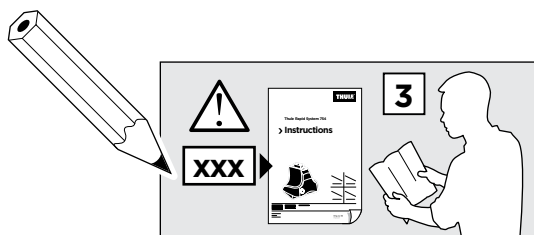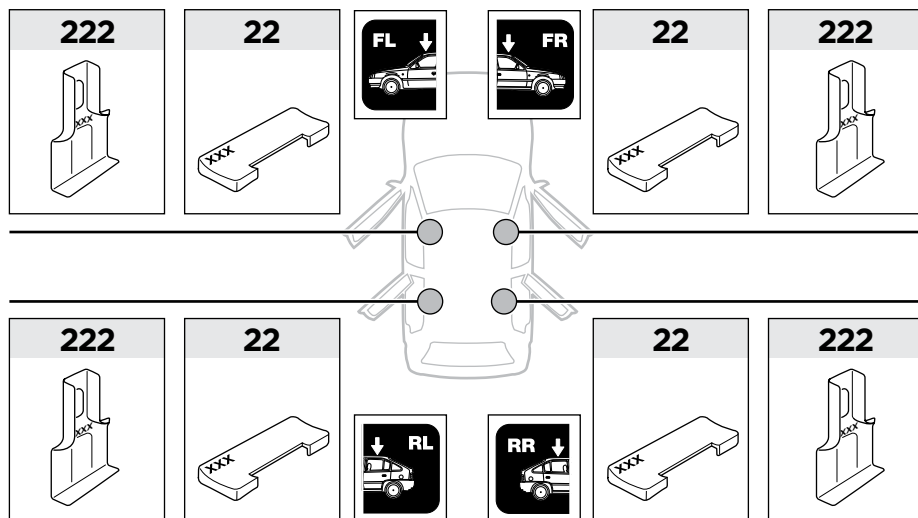

3

